


Headlights

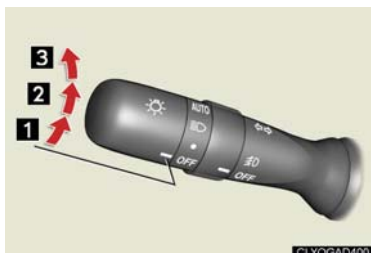

- 1 The instrument panel, side marker, parking, tail and license plate lights turn on.
- 2 The headlights and all lights listed above turn on.
- 3 The headlights and parking lights turn on/off automatically in accordance with ambient light levels.



To engage the high beams, push the lever forward.
To flash the high beams, pull the lever and hold.

■ AFS (Adaptive Front-lighting System)


AFS improves visibility at intersections and on curves by automatically adjusting the direction of light axis of the headlights according to vehicle speed and the degree of the tire angle that are controlled by steering input.



To cancel the system, press the AFS OFF button.
The indicator comes on when the system is off.

Press the button again to reactivate the AFS.

Fog Lights

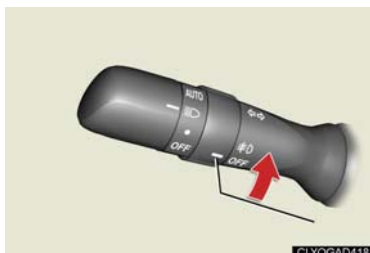

The fog lights can be used only when the headlights (low beam) are on.

Windshield Wipers and Washer

■ Intermittent wiper with interval adjuster (if equipped)



MIST: single wipe

INT: intermittent operation*


LO: low speed

HI: high speed

*: Wiper interval can be adjusted by turning the band.

To spray washer fluid, pull the lever. The wipers will operate automatically.

■ Rain-sensing windshield wipers (if equipped)

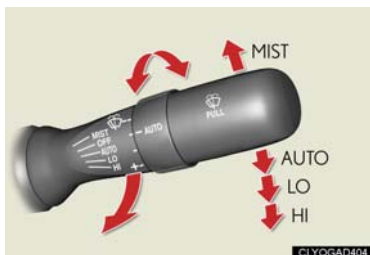

MIST: single wipe

AUTO: automatic operation*

LO: low speed

HI: high speed

*: Sensitivity can be adjusted by turning the band.


To spray washer fluid, pull the lever. The wipers will operate automatically.

Headlight Cleaner (If Equipped)



The headlight cleaner can be used only when the engine switch is in IG-ON mode and the headlights are on.

Rear Window and Outside Rear View Mirror Defoggers

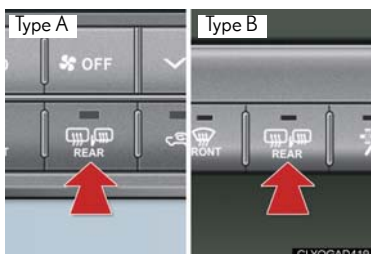


To defog the rear window and the outside rear view mirrors, press the button.

Press again to cancel.

The system turns off automatically after 15 minutes.

Instrument Panel Light Control

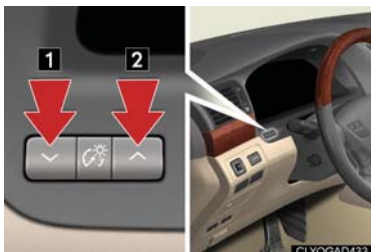

1 To dim: press ∨.

2 To brighten: press ∧.